



# BRACKET DRILLING TEMPLATE

(Read installation sheet for proper use.)

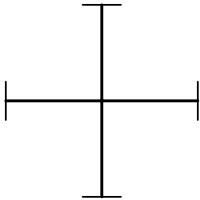

**IMPORTANT: If you are printing this template yourself from the Adobe Acrobat Reader® PDF document...** This cross should measure exactly one-inch (25.4 mm.) along each axis. Confirm this is properly scaled if you have printed this drill template from the Adobe Acrobat Reader® document (PDF file). If the scale is incorrect, be sure to select "None" under the "Paper Scaling" in the print options.

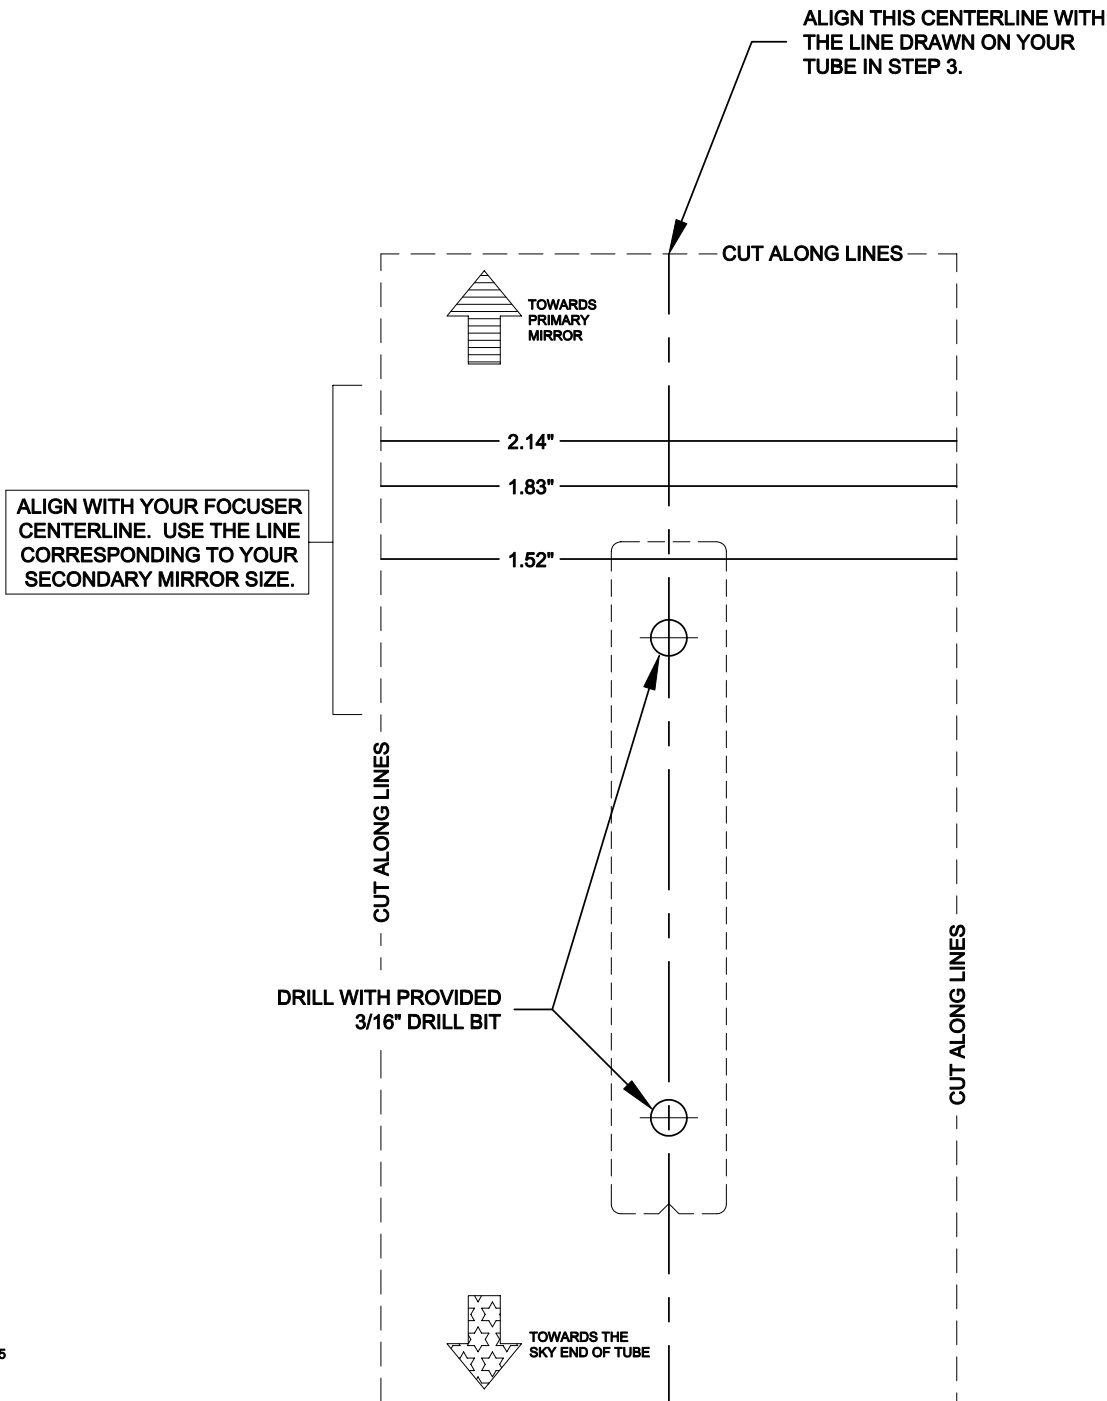

LONG BRACKET